



Install instructions
Audi RS4 B8

Startsituation:



Lift the boot floor to to get to the necessary connections and components:



Unplug the original connector from the solenoid valve and connect him with the matching plug of the Control System. Then plug the second connector of the Control System at the solenoid valve and attach the ground wire to the marked nut:



PLEASE NOTE: The exhaust flap maybe original ALWAYS open when the car is standing, a test of the "duration" function is possible only when driving. At best, the difference in holding the throttle or low acceleration in the range 3,000 to 4,000 1 / min can be heard.



Owner: Christian Müller

Vorstadt 15

94577 Winzer

Germany

Telephone: +49 (0) 9901 200981

Fax: +49 (0) 9901 200983

info@special-exhaust.de

www.special-exhaust.de