




Installation instructions
Audi R8 4S

Lift the vehicle and prevent it from rolling away and falling down.
Then remove the rear right wheel and the wheel housing.
The solenoid valve is located to the right of the suspension:

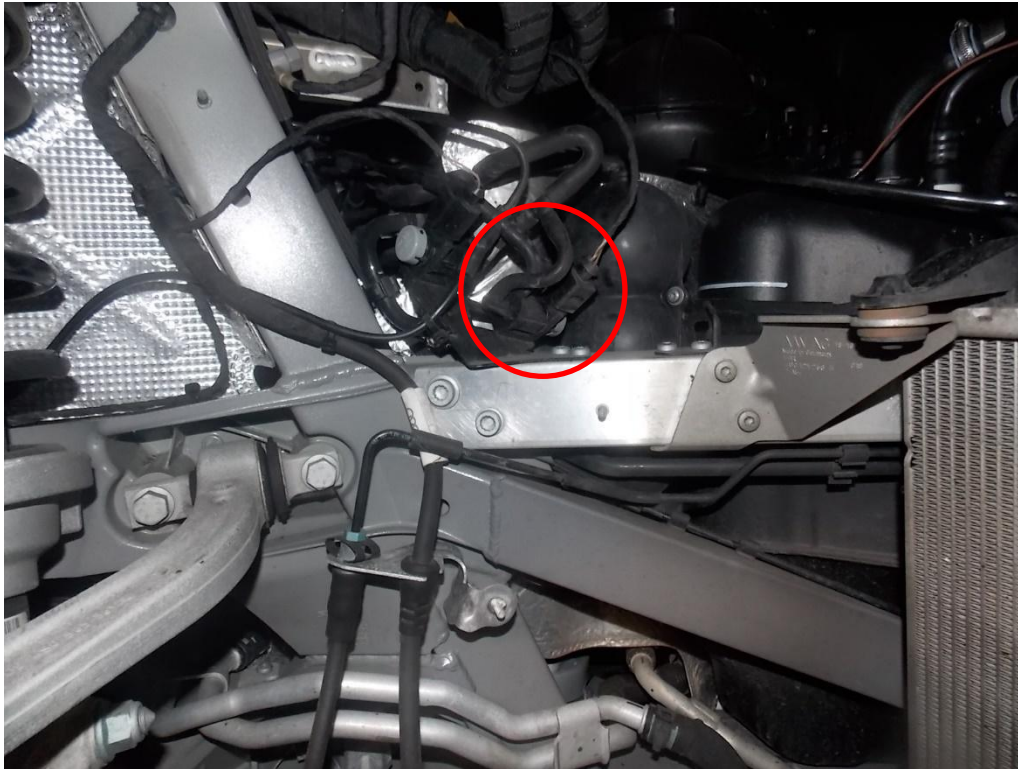


Disconnect the original plug from the solenoid valve:



Then Connect the plug of the controller to the solenoid valve and then the second plug of the control system with the matching original plug:



In the area to the right of the wheel is enough space to place the control unit.
There is also a ground point at which you can screw the ground cable:

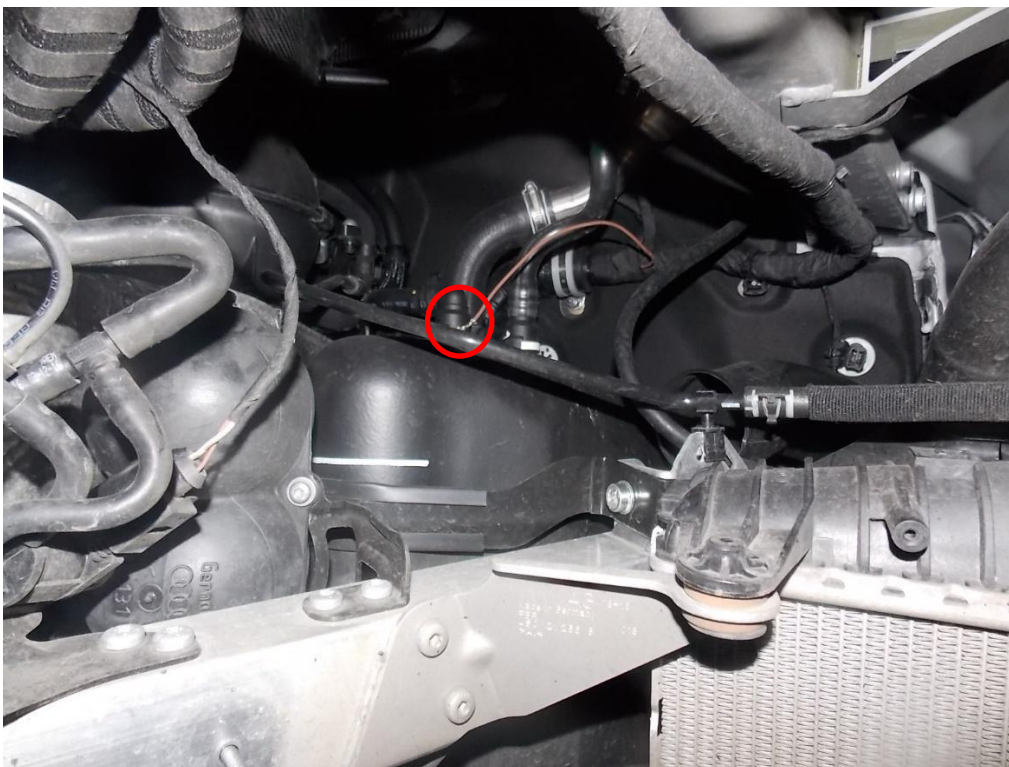

Fix the controller using cable ties by using the mounting holes of the controller.

If possible, test the function of the control and then reinstall the wheel housing and the rear wheel.



Owner: Christian Müller

Vorstadt 15

94577 Winzer

Germany

Phone: +49 (0) 9901 200981

Fax: +49 (0) 9901 200983

www.special-exhaust.de

info@special-exhaust.de