



Installation instructions
Control Exhaust flap
Audi RS5


Start Situation:



Lift the boot floor to get to the necessary connections and components:



Plug the Series connector at the solenoid valve and connect him with the matching plug of the flap control. Then insert the second plug of the control system to the solenoid valve and attach the ground wire to one of the two marked nuts:

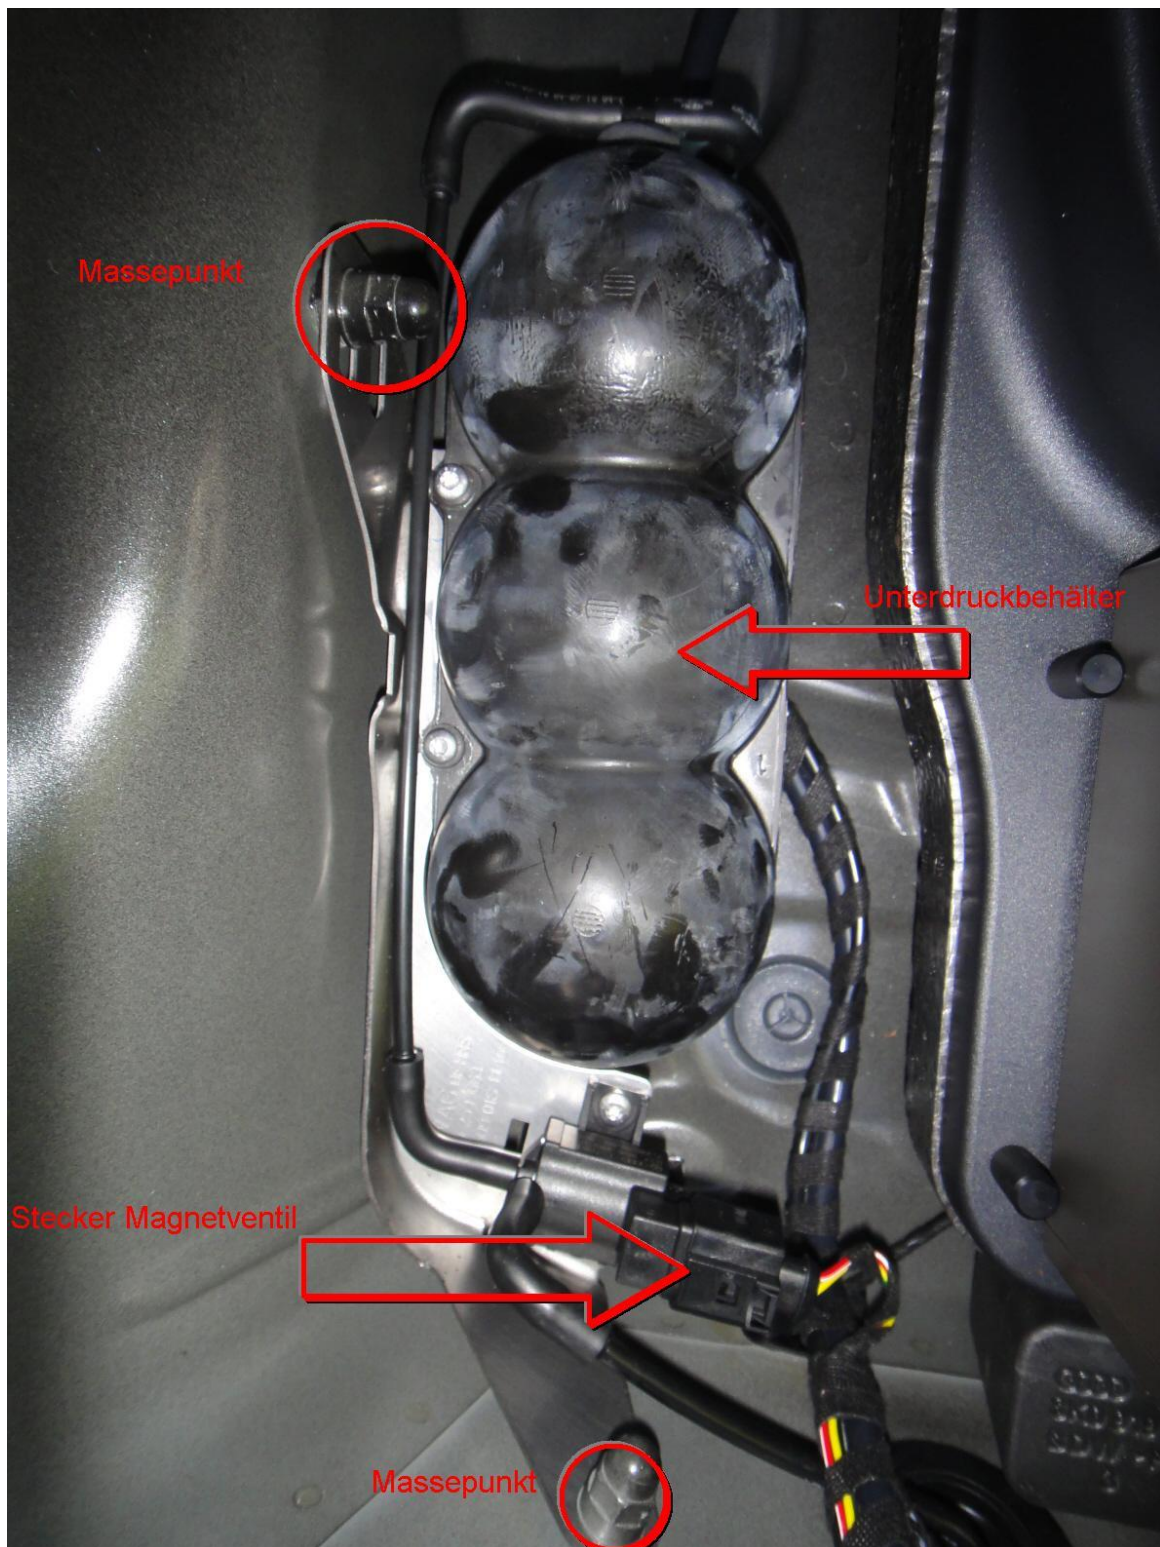

Fix the control with 2-3 cable ties to the vacuum tank to reduce noises while driving.

PLEASE NOTE: The exhaust flap is basically ALWAYS opened on most vehicles in the standstill, a test is the "valve opened" function so is only at driving possible. At best, the difference can be heard in holding the throttle or low acceleration at the range 3,000 to 4,000 1 / min.



Owner: Christian Müller

Vorstadt 15

94577 Winzer

Germany

Telephone: +49 (0) 9901 200981

Fax: +49 (0) 9901 200983

info@special-exhaust.de

www.special-exhaust.de