




Installation instructions
Valve Control 2
Audi S1

Dear customers,

unfortunately we currently have only a few pictures in these installation instructions from the Audi S1 available, if the situation visually should be different at your car than shown here we would be very happy about images and information to update this document.

First remove the trunk floor of the vehicle, then remove the boot sill trim.
The boot sill trim is held at 4 clips and can be pulled away upwards.
If necessary disconnect the marked plug for the to completely remove the lining.

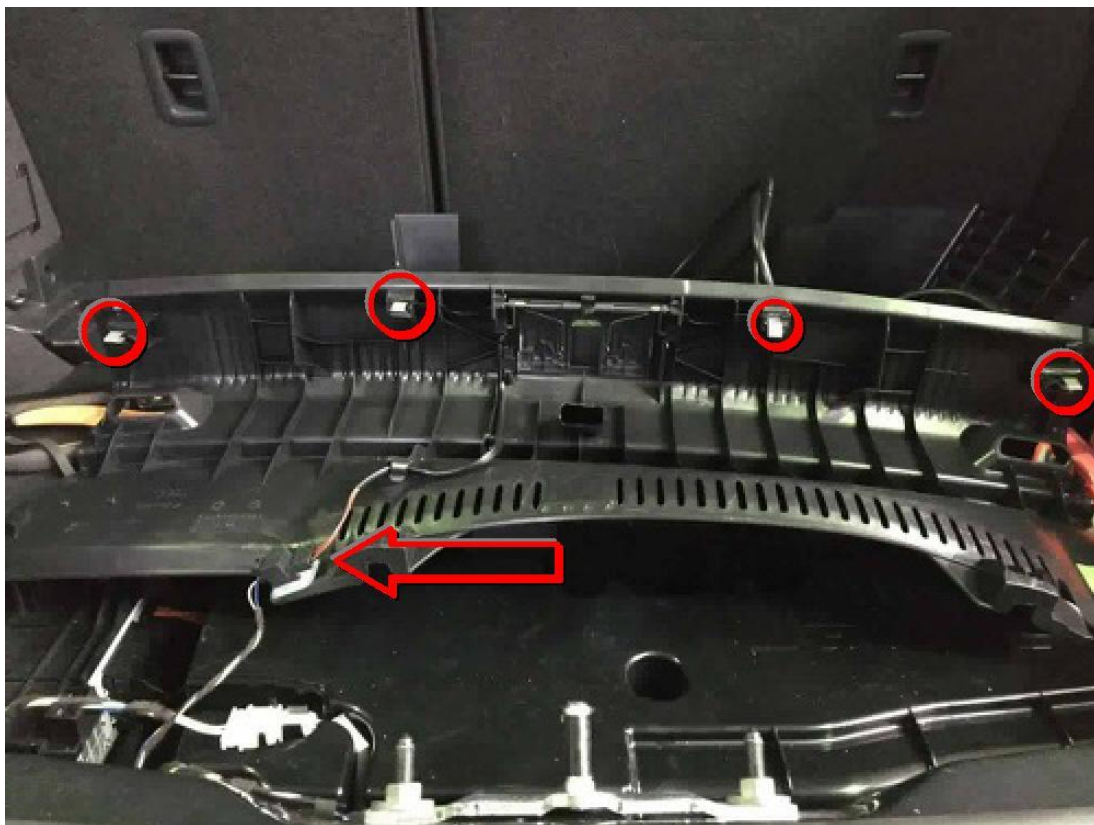

At the marked area, inside the vehicle, is a grommet:




After an appropriate modification of the rubber grommet please pass the cable of the control system through.



The original connector must be removed from the servo motor and connected on the matching plug of the control system. The second plug of the control system can then be plugged onto the servo motor (Figure shows Golf 7):



The cable of the flap control system are designed that the flap control can be placed in normal case in the foam above or inside the spare wheel:

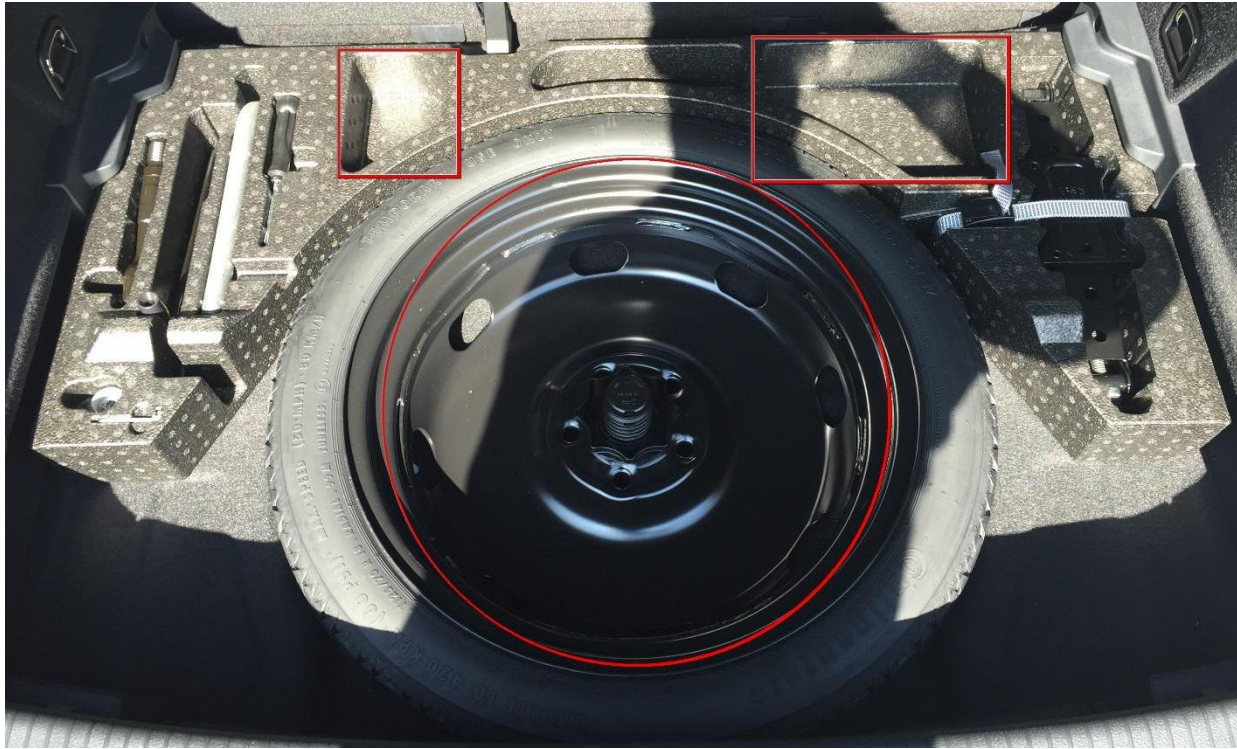



Owner: Christian Müller

Vorstadt 15

94577 Winzer

Germany

Telephone: +49 (0) 9901 200981

Fax: +49 (0) 9901 200983

info@special-exhaust.de

www.special-exhaust.de